


# HOW TO RESET YOUR TESLA GATEWAY

## 1. Open the Tesla Gateway



## 2. Press and hold the reset button for 2-3 seconds using a chopstick or similar item, as the reset button sits 3 inches inside the Tesla Gateway.

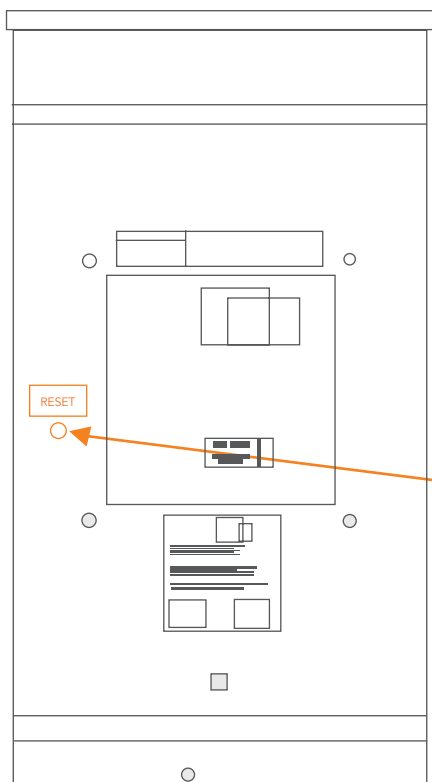

Tesla Gateway inside panel